

## Installation Instruction for LT783/786 LS/LV Tubular Latch

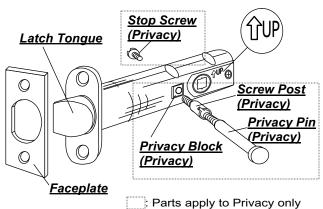

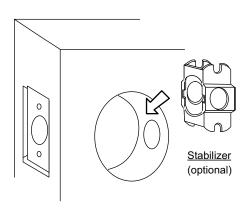

- Step 1 Remove the Blocking Screw from the Latch
- Step 2 Insert the Nylon Stabilizer onto door bore
- Step 3 Insert the <u>Latch</u> from door edge at the direction as indicated on latch and engaged with the <u>Stabilizer</u>
- Step 4 Rotate the <u>Latch Tongue</u> to match the door handing, attach the <u>Faceplate</u> and fasten with Screws
- Step 5 Fasten the <u>Stop Screw</u> onto the <u>Privacy Block</u> at the exterior side of the Latch/door
- Step 6 Fasten the <u>Screw Post</u> onto the <u>Privacy Block</u> at the interior side.
- Step 7 Follow the Lever/Trim set installation instruction to install the Lever/Trim set.
- Step 8 Fasten the <u>Privacy Pin</u> onto <u>Screw Post</u> from the pin hole of the interior Rosette/Trim
- Step 9 Test before closing the door!!
  - Depress the **Privacy Pin** to lock, the exterior Lever is rigid.
  - Operate the interior Lever to retract the <u>Latch</u>; it frees the exterior Lever simultaneously.
  - Anti-lockout test depress the <u>Privacy Pin</u> to lock the latch; depress the <u>Latch Tongue</u> as if closing the door, the <u>Privacy Pin</u> pops up and frees the exterior Lever simultaneously.

## Note:

For Passage application, skip Steps 1,5, 6, 8 & 9.